


ETP-SME INSTALLATION

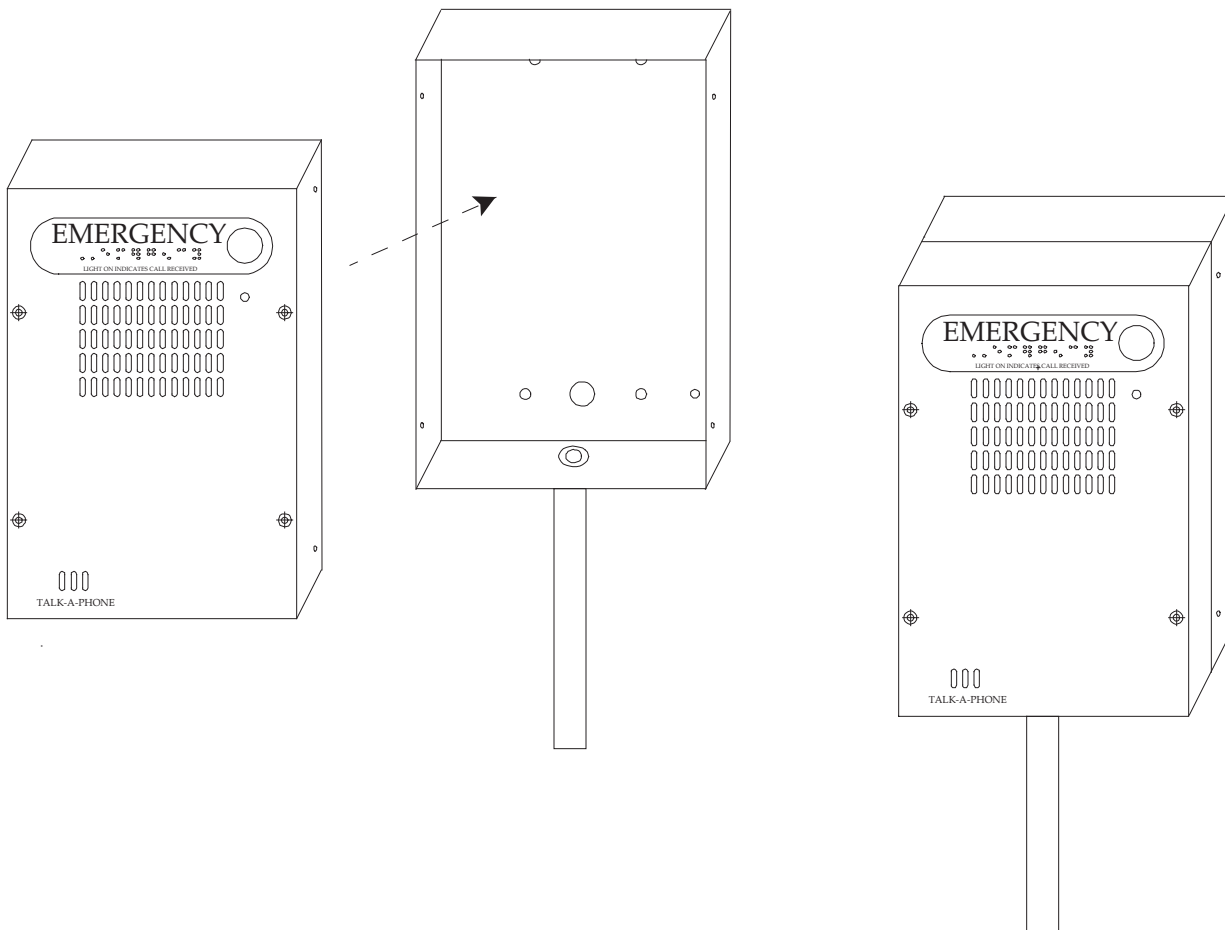

INSTRUCTIONS

Affix ETP-SME Surface Mount Extension to wall or post using the four mounting holes.

Run conduit through bottom knockout and into ETP-SME.

Remove saddle bracket from surface mounting emergency phone (ETP-401 pictured). Store or discard as desired.

Align emergency phone inside Surface Mount Extension and screw in place with original screws.